



LOCK OUT CONTROL - TOUCH SCREEN SYSTEM

MAIN SCREEN

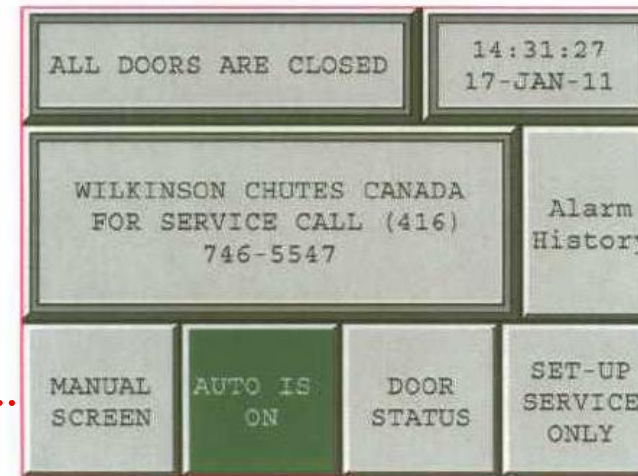


DOOR STATUS

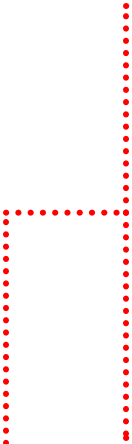

PANEL/SCREEN LEGEND:

- **Manual Screen:** Will allow manual operation of recycling system flaps.
 - **Door Status:** Will display which doors are opened or closed on various floors. ('0' = closed, '1' = open)
 - **Alarm History:** Indicates date and time of any issues that may have occurred within the system.
- To activate flaps manually;**
'Auto' selection should be 'Red' or in 'Off' mode on the Main Screen
- **Flap 1 & 2 Extend:** Allows flap to move forward.
 - **Flap 1 & 2 Retract:** Allows flap to move back to the default position.
 - **Compactor Cycle:** Allows the compactor ram to move forward and back.
 - **Door Lock:** When 'ON' doors are locked-out and out of service will be indicated on all residential floors. When 'OFF' - doors are operational.
 - **Organic Lockout:** When 'ON' organic flap is deactivated - debris will automatically go into garbage container, when 'OFF' organic flap is activated.
 - **Recycling Lockout:** When 'ON' recycling flap is deactivated – debris will automatically go into the garbage container, when 'OFF' recycling flap is activated.
 - **Compactor Reverse:** Brings compactor ram to default position.

MANUAL OPERATION

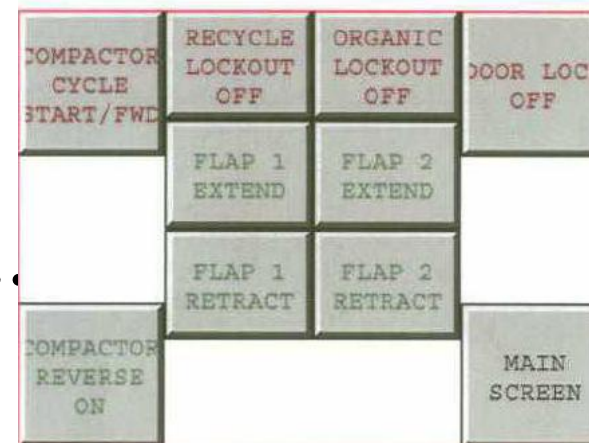

Power: When illuminated, control panel is energized.

Fault: When illuminated, see display screen and proceed accordingly.



Power On/Off: Energizes power to the control panel.



EMERGENCY STOP

Emergency Stop: Pull incase of an emergency, system will shut down.



Indicates Voltage

DANGER _____ VOLTS
TURN OFF POWER AND LOCK OUT POWER BEFORE OPENING THIS PANEL